
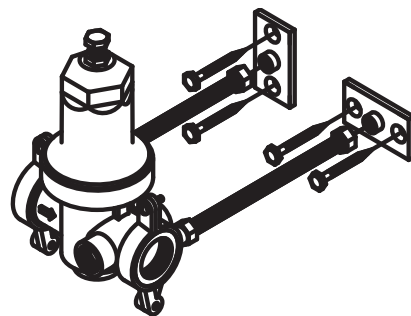


Installation Instructions:


Step 1: The *pside-kick*® can be installed vertically, horizontally, wall stud mount, or pipe mount. Mount to Wall (If not mounting to the wall, skip to step 2.)

- A) Thread two lock nuts on each all thread bolt about 2" in. Thread the wall bracket on one end of 3/8" X 6" all thread bolt and thread clamp to other end of it.
- B) Attach the clamps to the CSV1A with the bolts but do not tighten. Hold manifold to wall over a stud and mark the holes.
- C) Remove clamps from CSV1A and use wall screws to mount wall brackets to wall stud.

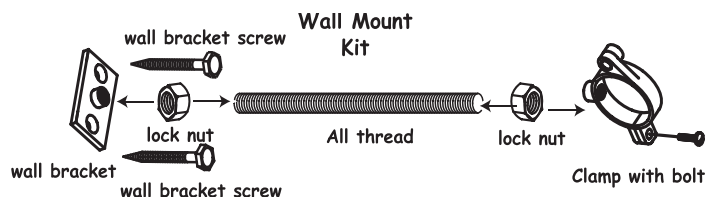

Step 2: Model PK1A

Wrap threads on all male fittings (1/4" x close nipples, 1/2" X 1/4" reducer bushing, 1/4" X 1/4" snubber, 1/2" PRV, pressure gauge, and pressure tank) with 5-7 layers of teflon tape.

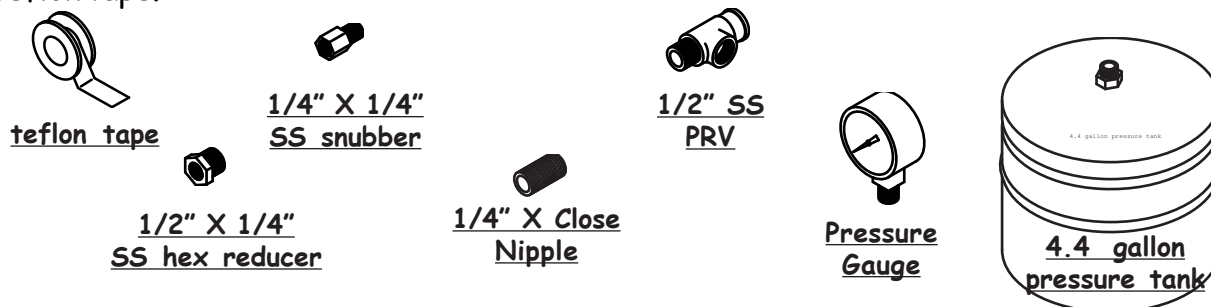

Step 3:

Assemble the valve/manifold as shown. Be sure to thread the manifold on to the pressure tank last. The PRV will need to be plumbed to a drain or outside. If mounting to the wall, do not install pressure tank or pressure gauge until manifold has been mounted to wall.

